

Ready To Go

SimpleSpec 100.06™

Installation Manual




For more information, please visit 3-form.com or call 800.726.0126

APRIL 2018 | MAN-RTG-100-06 | REV 002 © 2018 3form, Inc. All rights reserved.


Contents Overview

(×2)




Framed Door

(×8)




Screw Cover
3-15-0011

(×4)




Dust Brush
3-15-0012

(×2)

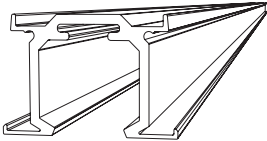


Top Roller Track
0-15-0201

(×2)

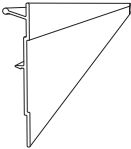


Valance
3-15-1111

(×2)

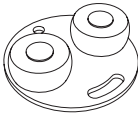


Floor Guide
3-15-1113

(×4)

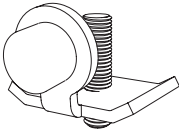


Bumper
3-15-1761

(×4)

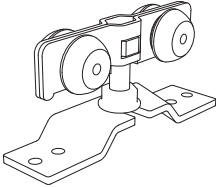

Top Roller Assembly
3-15-1804


(×4)

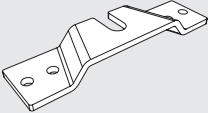

Fixation Plate

+


(×4)

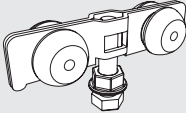

Roller

+


(×12)

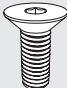

Screw


Overview

The 100.06 system from 3form is a clean, versatile sliding door system with excellent functionality. The sleek frame profiles and satin anodized finish make the hardware of this door a perfect complement to the aesthetic material it holds, making a beautiful, functional solution for your installation.

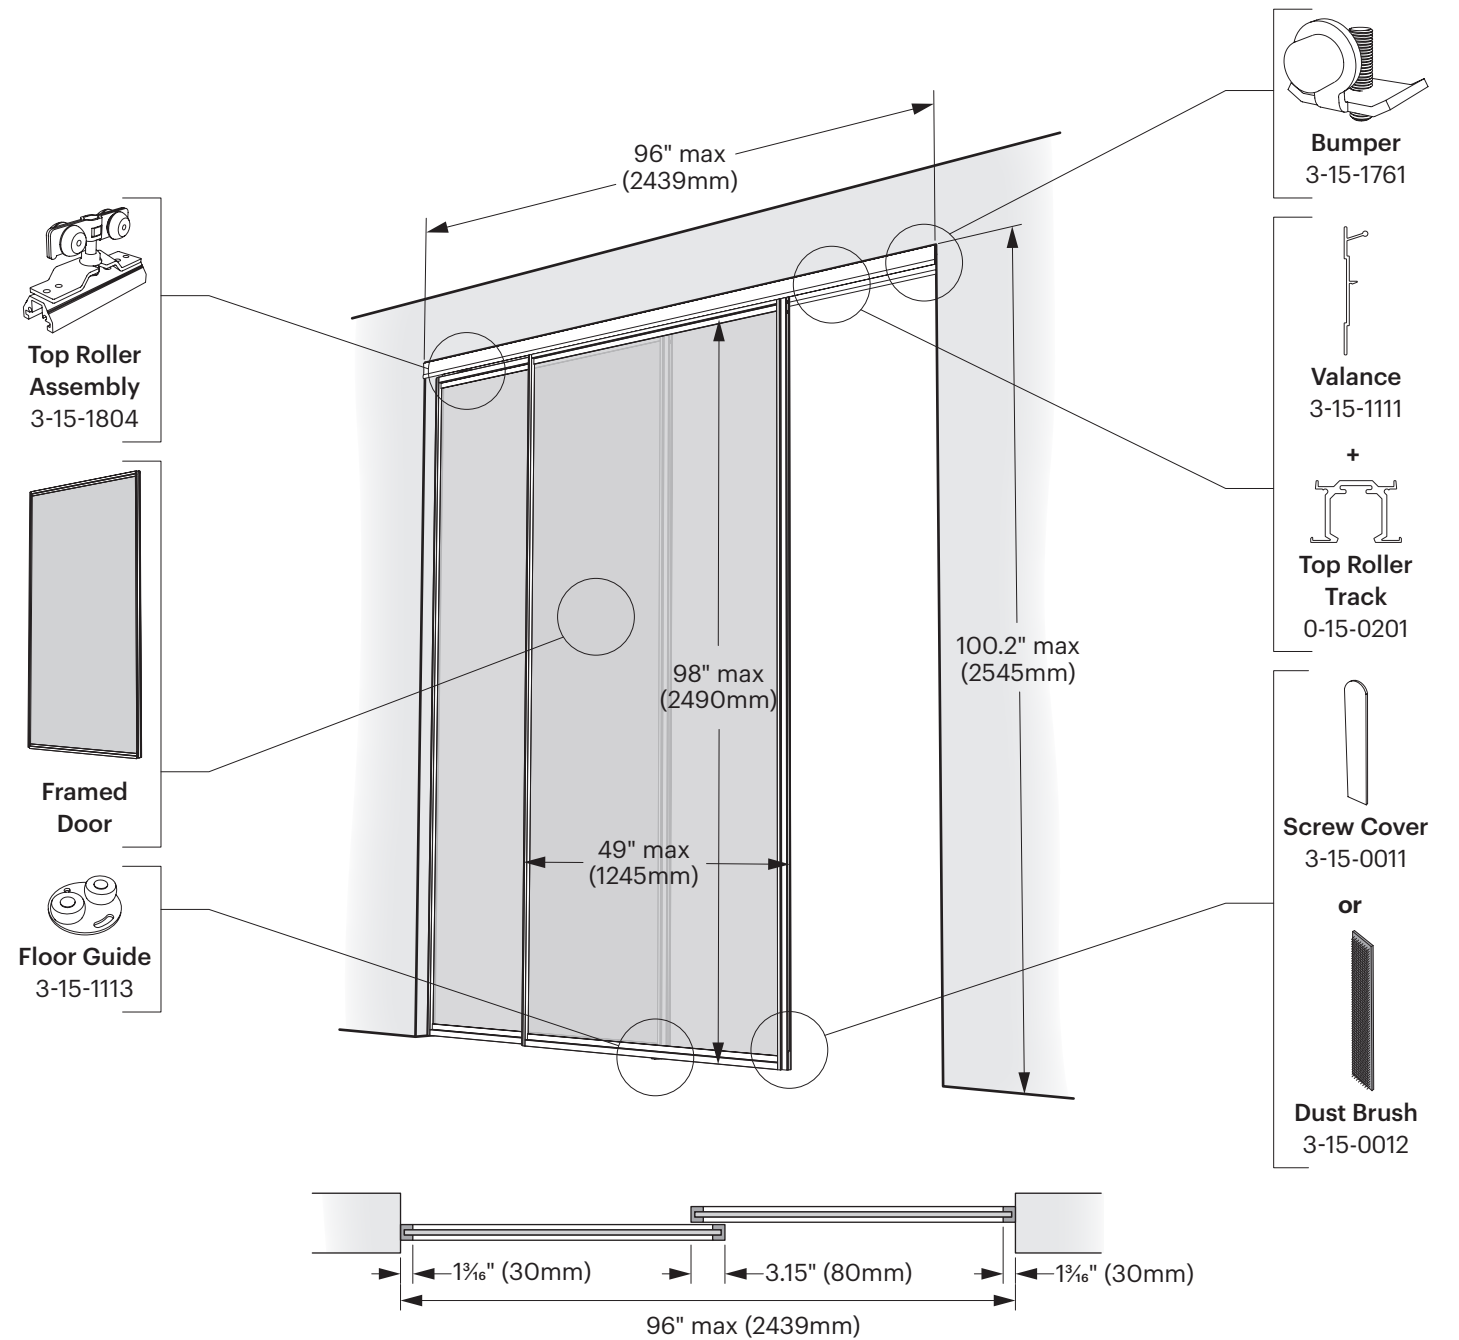


Pre-Installation


Required Tools

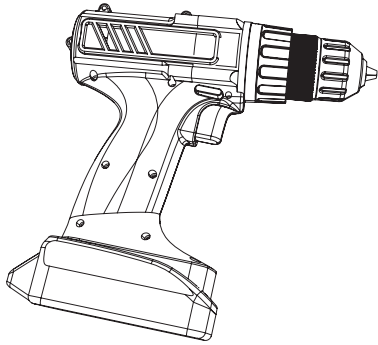


Drill

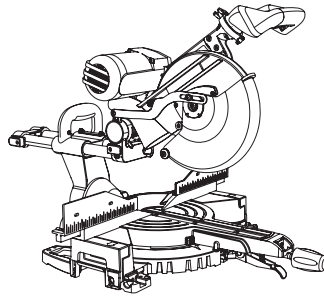


Chop Saw

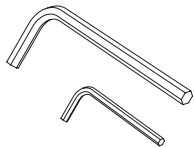

Metric Allen Wrenches

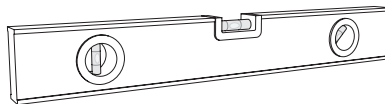

Level

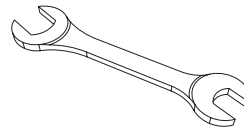


Wrench

Installation

1 Attach Rollers


** Complete this step for both doors.*

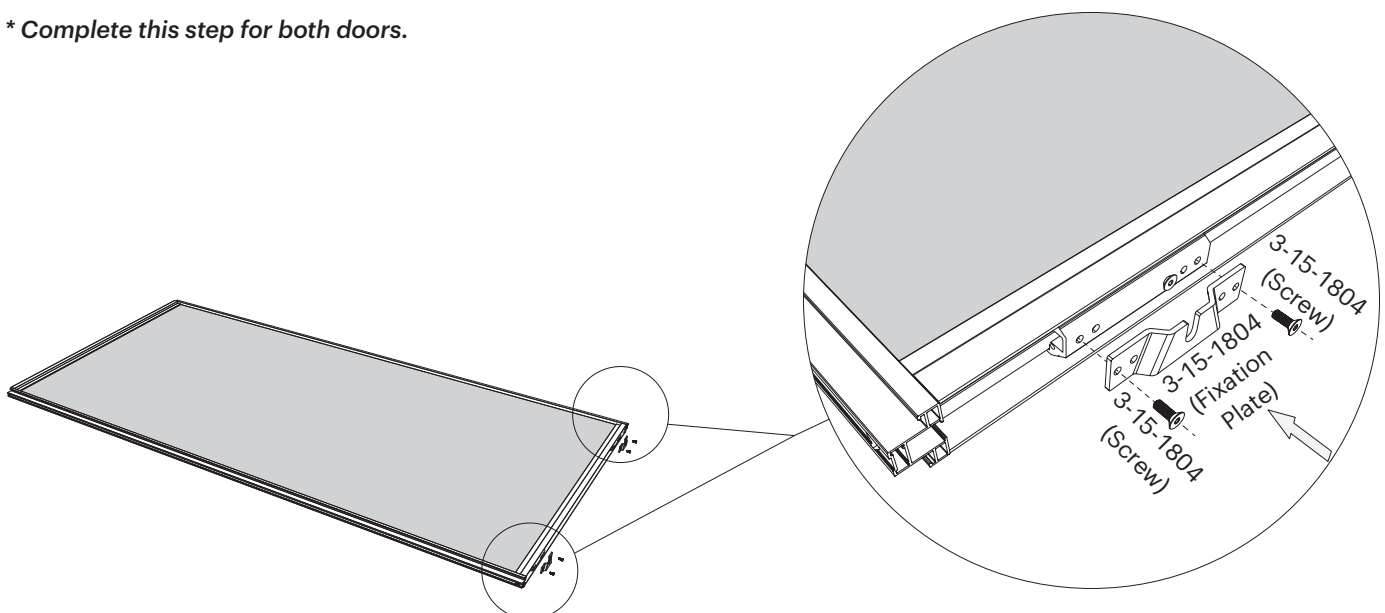

Installation

2 Attach Screw Cover or Dust Brush


** Complete this step for both doors.*

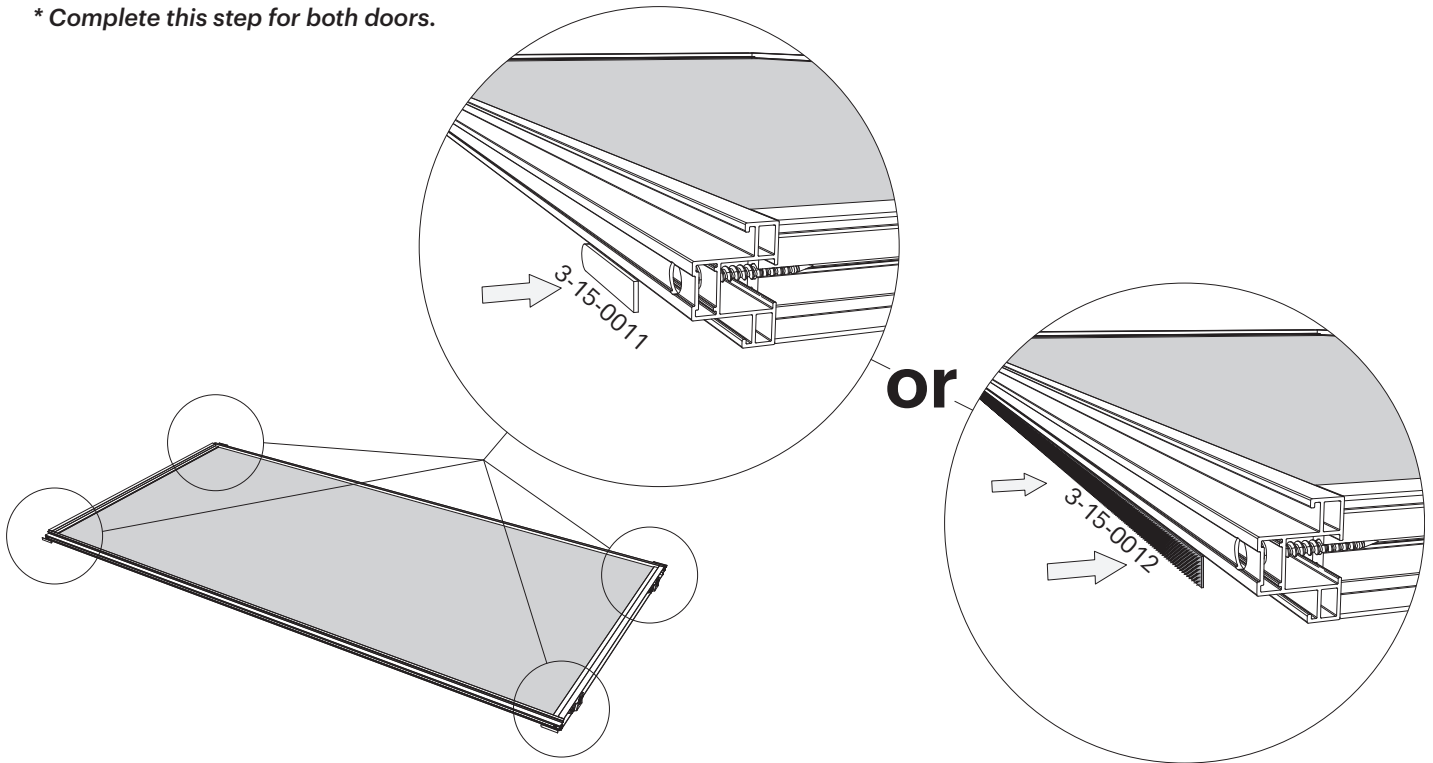

3 Insert Top Rollers and Bumpers


** Complete this step for both doors.*

a Cut tracks to length for opening size.

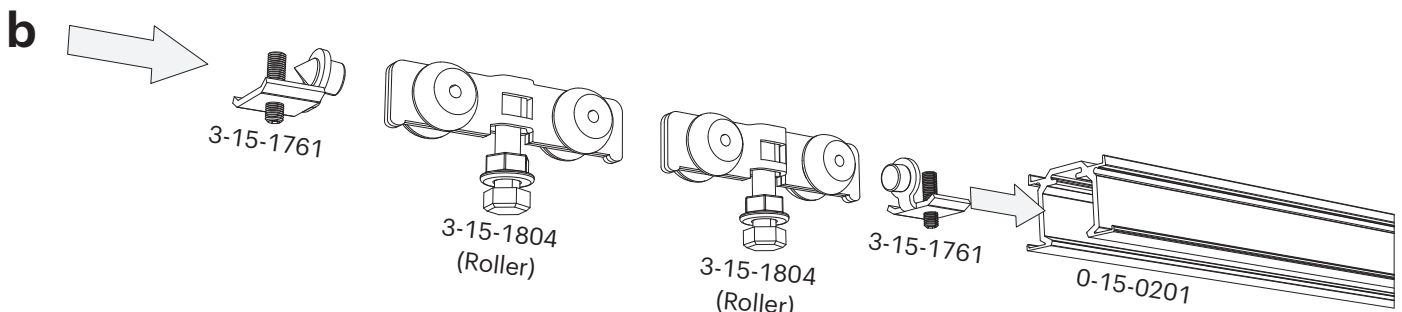


Installation

3 Insert Top Rollers and Bumpers cont...

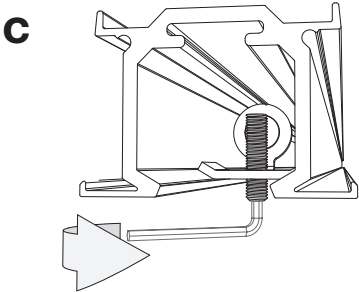


4 Install Top Tracks

Anchor every ±18" O.C. to substrate.

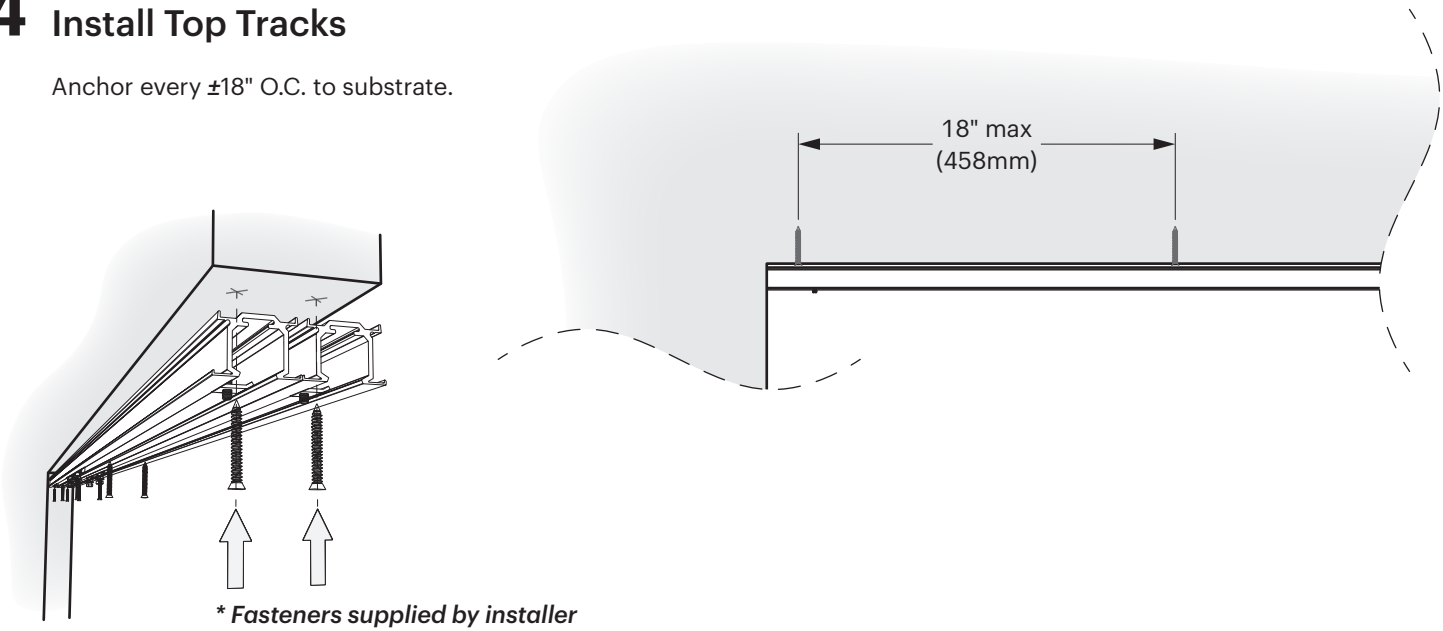

Installation


5 Install Floor Guides

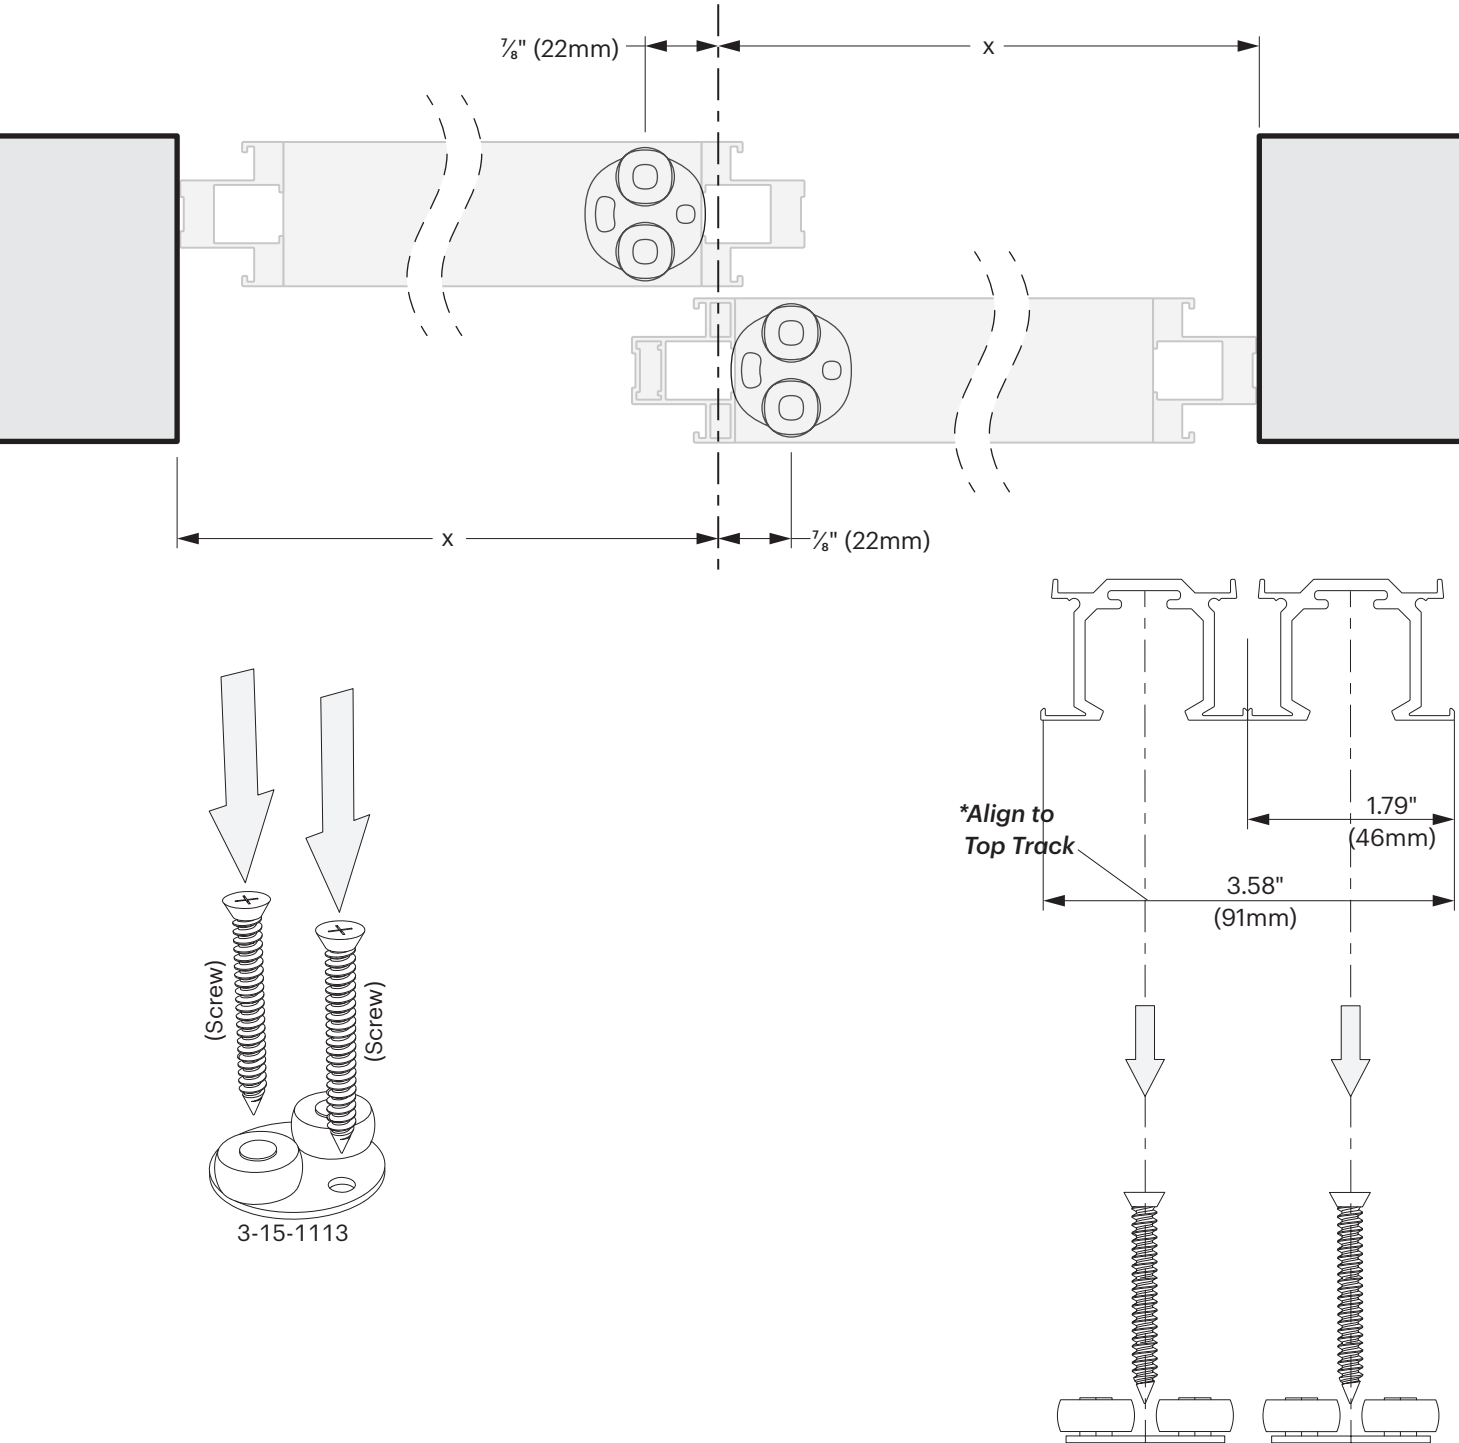


Installation

6 Attach Doors


a

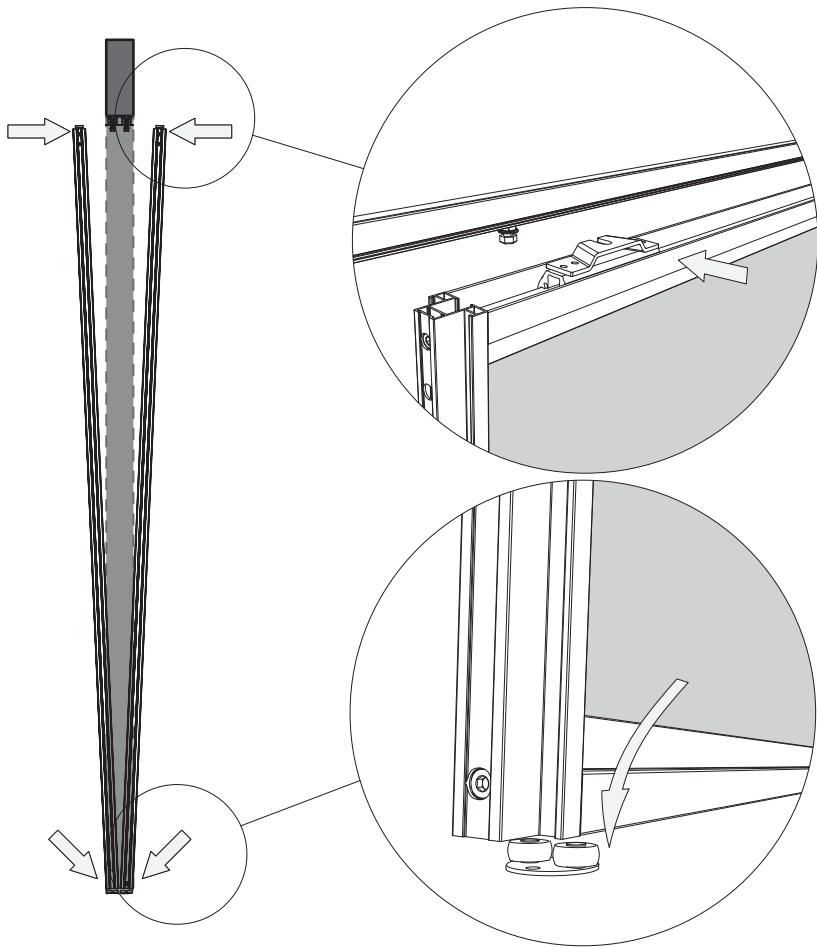

b Level the door by adjusting the top roller hanging bolt with a wrench.

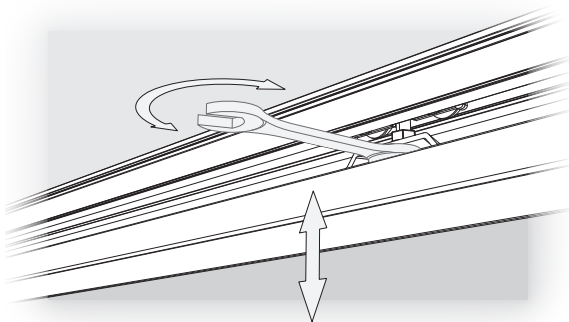


c Once level, tighten nut.

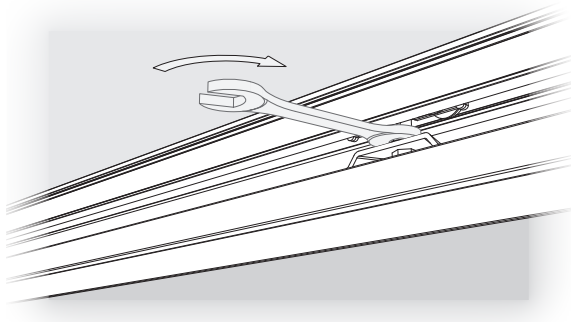

Installation

7 Attach Valances

Cut valances (3-15-1111) to length and snap in place.

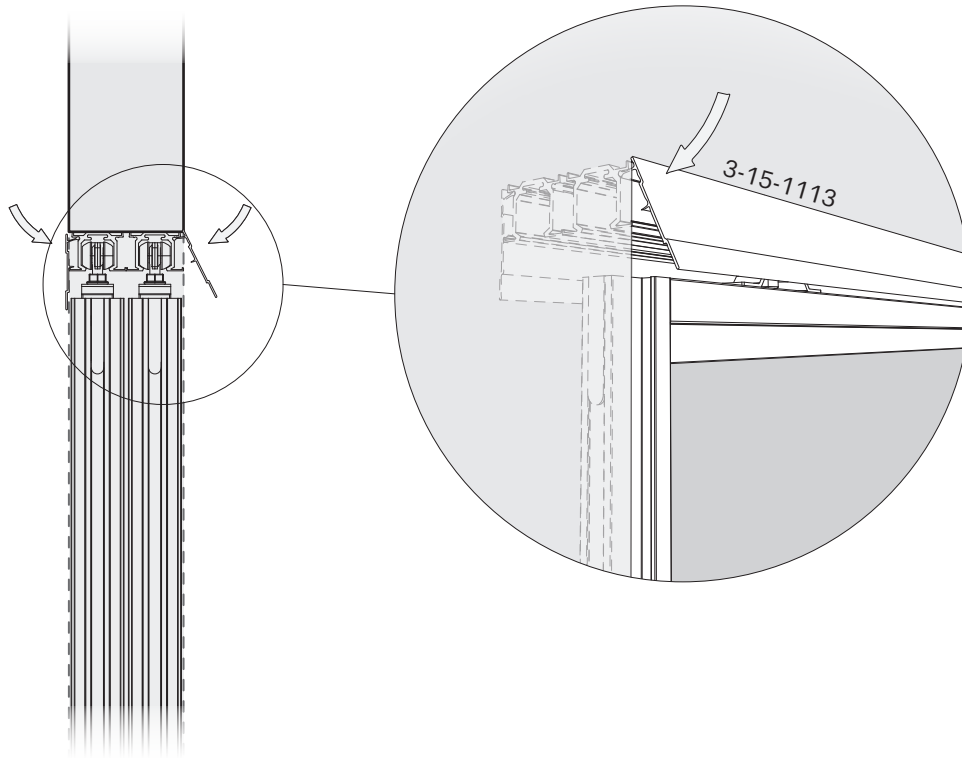

8 Adjust Bumpers

Adjust bumpers (3-15-1761) installed in Step 3c to stop the doors from hitting the wall.

